

WARRANTY

Minimizer Floor Mats are backed by a Lifetime Manufacturer's Warranty and are guaranteed against flaws due to faulty materials and/or unintended production variations. This warranty extends only to the original purchaser and excludes damage caused by abnormal use or conditions, including but not limited to extreme abrasive conditions and/or excessive exposure to chemicals such as bleach, gasoline and other fuels.

Disclaimer: Minimizer custom molded floor mats are not Navistar International goods and INTERNATIONAL is a federally registered mark of Navistar.

IMPORTANT SAFETY INFORMATION

READ BEFORE INSTALLING OR USING MINIMIZER FLOOR MATS

INTERNATIONAL MODELS (FKINTL2B)

- 4100, 4200, 4300, 4400 2002 - 2007
- WorkStar 7300, 7400, 7500 2008 - 2019
- DuraStar 4100, 4300, 4400 2008 - 2019*
- MV60H 2019 - 2021*
- HV607 2019 - 2021
- 7300, 7400, 7500, 8500 2002 - 2007
- TranStar 8500 2008 - 2019
- MV607 2019 - 2021*
- HV507 2019 - 2021

* Model year 2016 thru 2020 International MV607, MV60H, DuraStar 4300, and DuraStar 4400 trucks that are equipped with the Cummins ISB 6.7L engine together with the Allison RDS transmission are not compatible with the passenger side floor mat. Driver side floor mats are compatible with all engine and transmission configurations.

INTERNATIONAL MODELS (FKINTL3B)

- HV513 2019 - 2020
- WorkStar 7600 2008 - 2019
- 7600 2002 - 2007
- TranStar 8600 2008 - 2019
- HV613 2019 - 2020
- WorkStar 7700 2008 - 2019
- 7700 2005 - 2007
- 8600 2002 - 2007

Safety Instructions for Installation

- Use only with the specified vehicle make, model and year.
- Do not install on top of other floor mats.
- Install each floor mat with the Minimizer logo facing up.
- Use each floor mat only in its proper location in the vehicle.
- Install and use a retention hook for the driver side floor mat.
- Make sure that the floor mats fit properly in your vehicle floor space.
- Do not place additional floor mats on top of the Minimizer floor mats.
- Carefully follow each of the Installation Instructions for Minimizer Floor Mats on the following pages.

Safety Instructions for Vehicle Operation

- Before starting or operating the vehicle, verify that the Minimizer floor mats are installed correctly, that the driver side mat is secured by a retention hook, and that the driver side mat does not interfere with the accelerator, brake, or clutch pedal.
- Make sure there are no loose objects in the vehicle that could possibly interfere with the operation of the accelerator, brake, or clutch pedal.
- If your Minimizer floor mat becomes loose, stop the vehicle at the next safe location. Re-install the floor mat properly and securely. If that is not possible, remove the floor mat and place it in a location where it will not interfere with safe operation of the vehicle.
- Inform all drivers of these warnings before allowing them to operate a vehicle equipped with Minimizer floor mats.

If you have questions about these instructions or proper installation of your Minimizer floor mats, please contact Minimizer at (800) 248-3855.

A DIVISION OF **HIGH BAR BRANDS, LLC**



**HIGH BAR
BRANDS**



2701 18th Street SW, Owatonna, MN 55060
1-800-248-3855 | Fax: 507-583-7540

www.minimizer.com



Item # 105551

May 2021

Minimizer floor mats are specifically designed for certain vehicles and may be used safely only with those vehicles. **VERIFY THAT THE MAKE, MODEL, AND YEAR OF THE VEHICLE IN WHICH YOU ARE INSTALLING THE FLOOR MATS IS IDENTIFIED ON PAGE 1 AS BEING COMPATIBLE WITH THE MINIMIZER FLOOR MATS YOU HAVE SELECTED.**

INTERNATIONAL WORKSTAR / DURASTAR / TRANSTAR FLOOR MAT KIT SPECIFICATIONS:

- Contents of floor mat kit # FKINTL2B are shown below in Figure 1.

Figure 1 - Kit FKINTL2B Contents



- Contents of floor mat kit # FKINTL3B are shown below in Figure 2.

Figure 2 - Kit FKINTL3B Contents



INSTALLATION INSTRUCTIONS

1. Remove other floor mats from the vehicle before installing Minimizer floor mats.
2. Install the Minimizer floor mats right side up, with the Minimizer logo visible.
3. Each Minimizer floor mat is contoured to fit a particular location in the vehicle and may be used safely only in that location.
4. The Minimizer floor mat package contains one driver mat and one passenger mat. The underside of each floor mat contains an 11 digit part number. The third, fourth and fifth characters in the part

number identify the proper location for the floor mat. The driver side mat is identified by the letters DRV; the passenger side mat is identified by the letters PAS.

5. Position the driver mat in the truck as shown in Figure 3.

Figure 3 - Driver Mat in Position



6. Inside the package with the installation instructions, locate the black plastic retention hook as well as a white tube of Primer 94 as shown in Figure 4.

Figure 4 - Hook and Primer 94



7. Insert the hook up through the hole at the right rear corner of the driver side floor mat as shown in Figure 5. The hook should fit flush with the underside of the floor mat.

Figure 5 - Hook Insertion



8. Once the hook is in place, let the mat and hook rest on the floor as shown in Figure 6. Next, confirm that the mat is not interfering with foot pedals and verify it is making proper contact with the surfaces surrounding the floor.

Figure 6 - Confirm Location Driver Mat and Hook



9. Mark the approximate position where the hook will need to be attached to the floor with a finger. Once the position is located, remove the driver mat from the truck.

10. Unpack the tube of Primer 94 and read the safety precautions printed on the tube.

11. Activate the tube of Primer 94 by crushing the tube at the black dot.

12. Clean all dirt or debris off the truck floor and apply Primer 94 to the truck floor area where the hook will be attached.

13. Allow the Primer 94 to dry on the truck floor for five minutes.

14. Install the driver mat in the truck with the hook inserted. Next, peel away the paper backing from the hook.

15. While holding onto the neck of the hook, lower the driver mat into position and stick the hook to the floor. Apply firm pressure to the hook as shown in Figure 7 for 30 seconds to ensure a proper bond to the rubber floor.

Figure 7 - Apply Pressure to Hook



16. For optimal adhesion do not disturb the hook for a period of 20 minutes after installation.

17. Install the passenger mat and driver mat.

Note: the passenger side floor mat is designed to accommodate both fixed seats and suspension seats. For trucks equipped with a fixed passenger seat, there will be a gap of approximately 1 inch between the base of the seat and the back edge of the passenger floor mat. Figure 8 below shows the fit of the Minimizer passenger mat when installed in a truck with a fixed passenger seat.

Figure 8 - Passenger Mat with Fixed Seat



18. Pull the driver mat toward the front of the truck to confirm that the hook is fully engaged into the mat and that the hook is adhered to the floor. If the hook is not functioning properly or the mat cannot be securely installed, do not use a Minimizer floor mat on the driver side of the vehicle.

19 FAILURE TO PROPERLY INSTALL THE RETENTION HOOK FOR THE DRIVER SIDE FLOOR MAT MAY ALLOW THE MAT TO SHIFT, WHICH MAY INTERFERE WITH PROPER FUNCTIONING OF THE VEHICLE'S PEDALS, POTENTIALLY RESULTING IN LOSS OF CONTROL OF THE VEHICLE AND SERIOUS INJURY OR DEATH.

20. Move the accelerator, brake, and clutch pedals through their full range of motion to confirm there is no interference with the Minimizer floor mat.

21. Prior to operating the vehicle, read the Safety Instructions for Vehicle Operation.

22. FAILURE TO CORRECTLY INSTALL AND USE YOUR MINIMIZER FLOOR MATS ACCORDING TO THE INSTRUCTIONS ABOVE COULD PREVENT PROPER FUNCTIONING OF THE VEHICLE'S PEDALS, POTENTIALLY RESULTING IN LOSS OF CONTROL OF THE VEHICLE AND SERIOUS INJURY OR DEATH.